

# StormRax<sup>™</sup>

## Installation Instructions

All StormRax trash racks are supplied pre-drilled, include concrete anchor bolts and all the necessary mounting hardware. NOTE: Not using the pre-drilled holes will void your warranty. Please call if you have ANY questions.

### Concrete Riser Pipes and Boxes

The following instructions will guide the installer(s) through a quick and successful installation of concrete riser pipes and boxes.

#### Tools Required:

**Hammer drill**

**3/8" diameter masonry drill bit**

**1/2" wrench or adjustable wrench**

**STEP 1:** Lift trash rack onto concrete structure (typically can be done with 1-2 persons) Note: Top of structure must be sound and flat (within 1/8") around top of mounting surface. Mounting a trash rack to a structure that is not sound will void your warranty.

**STEP 2:** Position (center) trash rack on structure and mark all mounting hole locations.


**STEP 3:** Remove trash rack from concrete structure.

**STEP 4:** Drill mounting holes using a 3/8" diameter masonry drill bit.

**STEP 5:** Install 3/8" X 3" anchor bolts (supplied).

**STEP 6:** Lift trash rack over anchor bolts. Ensure trash rack is completely flush against concrete mounting surface and then secure using flat washers and nuts (supplied).

**STEP 7:** Ensure all anchor bolt nuts are tight and secure. **DO NOT OVERTIGHTEN!**

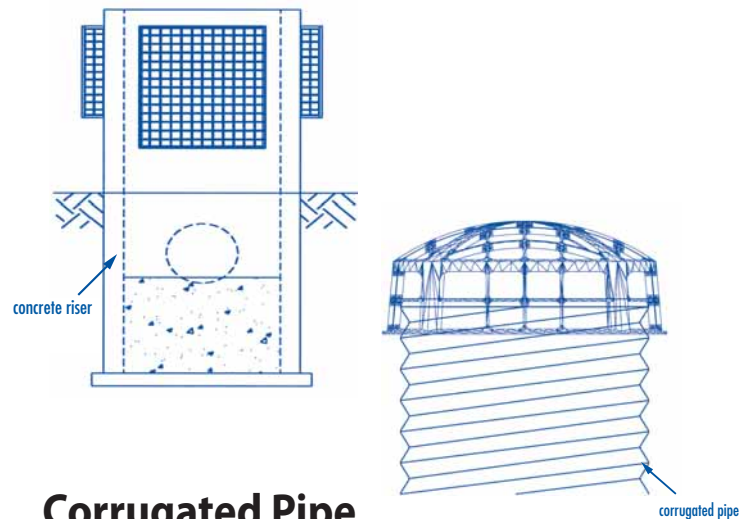

### Corrugated Pipe

The following instructions will guide the installer(s) through a quick and successful installation of corrugated pipes.

**STEP 1:** Locate the 4 mounting brackets on the crossbars and slide to the outside of the rack.

**STEP 2:** Lift trash rack onto corrugated riser, resting crossbars on top of riser. (Typically can be done with 1 or 2 persons) Top of riser should be sound and flat.

**STEP 3:** Center rack on top of riser, having equal distance between the outside of the riser and the outside of the trash rack.

**STEP 4:** Slide all 4 mounting brackets to the outside of the riser. With appropriate screw (for metal or plastic), attach the mounting brackets to the corrugated riser.

**If you have any questions concerning installation, please contact your local sales engineer.**

**StormRax**<sup>™</sup>

StormRax<sup>™</sup> is a trademark of Plastic Solutions Inc.

NOTHING IN THIS MATERIAL SHOULD BE CONSTRUED AS AN EXPRESSED WARRANTY OR AN IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. SEE CONTECH'S STANDARD QUOTATION OR ACKNOWLEDGEMENT FOR APPLICABLE WARRANTIES AND OTHER TERMS AND CONDITIONS OF SALE.

©2009 CONTECH CONSTRUCTION PRODUCTS, INC.  
All rights reserved. Printed in USA.